

uper XF

0

CREATIVE SXFI AMP Setup Guide for Microsoft Windows

For more information, visit creative.com/sxfisupport.

Creative SXFI AMP Setup on Microsoft Windows

The Creative SXFI AMP is compatible with PCs or laptops running **Microsoft Windows Creator's Update (ver. 1703) or newer**.

After completing the setup of your Creative SXFI AMP with your profile using an Android device, follow the steps below to ensure the optimal Super X-Fi experience.

Audio Settings Configuration

For the best experience with Super X-Fi, configure your audio settings in accordance with the number of audio channels in your content.

For example:

- If you are playing content with 7.1 channel audio, set 'Audio channel' to '7.1 Surround' in your Speaker Setup Configuration (See Step 4).
- If you are playing stereo content, set 'Audio channel' to 'Stereo' in your Speaker Setup Configuration (See Step 4).

Steps to Setting Up the Creative SXFI AMP on Microsoft Windows

<u>Step 1</u>

- Go to "Control Panel"
- Click on "Hardware and Sound"



Step 2

o Click on "Manage Audio Devices"



Step 3

- o Go to the "Playback" tab
- o Click on Speakers (Super X-Fi AMP) device item
- Select the "Configure" button

Sound	×
Playback Recording Sounds Communications	
Select a playback device below to modify its settings:	
Speakers / Headphones Realtek Audio Ready	
Super X-Fi AMP Default Device	
Configure Set Default V Pro	operties
OK Cancel	Apply

creative.com/sxfisupport

<u>Step 4</u>

- Click on the appropriate channel setting, for example, "7.1 Surround" if your content is 7.1, or "Stereo" if your content is stereo
- o Click 'Next'



<u>Step 5</u>

- Ensure that all the boxes are checked for 'Optional Speakers'
- o Click 'Next'



creative.com/sxfisupport

<u>Step 6</u>

- Ensure that all the boxes are checked for 'Full-Range Speakers'
- Click 'Next'



<u>Step 7</u>

o Click 'Finish'

		×
~	Speaker Setup	
	Configuration complete	
	If you click "Finish" your new settings will be applied to this audio device. To make further changes, you can use the Properties dialog or run this wizard again.	
	Finish Cance	el

<u>Step 8</u>

You will return to the Sound/Playback devices list.

• Click on 'Properties'



<u>Step 9</u>

- o Go to the 'Advanced' tab
- Select "24 bit, 48000 Hz (Studio Quality)"

Speakers Properties	×
General Levels Advanced Spatial sound	
Default Format	
Select the sample rate and bit depth to be used when running in shared mode.	
24 bit, 48000 Hz (Studio Quality)	
Exclusive Mode	
Allow applications to take exclusive control of this device	
Give exclusive mode applications priority	
Restore Defaults	
OK Cancel Apply	,

<u>Step 10</u>

- o Go to the 'Spatial Sound' tab
- Select "Off"
- Click "OK"

Speakers Properties ×
General Levels Advanced Spatial sound
Spatial sound format Select the Spatial sound format you want to apply.
Off ~
Turn on 7.1 virtual surround sound
Restore defaults
OK Cancel Apply

TIP: To enjoy the optimized Super X-Fi experience, in your application or your game running on the PC, always do the following where possible:

- Set game audio settings to 5.1 or 7.1 Speakers instead of Headphone (even though you are using the Creative SXFI AMP with headphones)
- o Disable any headphone surround virtualization

Congratulations, your setup is now complete.